



RE: Updated FAQs for connecting and powering the DMR40DVD / DMR41DVD / DMR42DVD series digital video recorders and the Supercircuits LCD17-5 and LCD19-5 video security monitors

SKUs: DMR40DVD, DMR41DVD, DMR42DVD, LCD17-5, LCD19-5, SY50404, SY50408, SY50416, SY50904H, SY50904P, SY50904U, SY50908H, SY50908P, SY50908U, SY50916H, SY50916P, SY50916U, SY51204, SY51208, SY51216, SY60404, SY60408, SY60416, SY60604, SY60608, SY60616

1. What cable do I use to connect my security monitor to my DVR?

- a. Decide which video cable you will use for your security setup. You need to use either a BNC, or a VGA cable. This DVR will simultaneously output video in either VGA or COMPOSITE (BNC) video formats.
 - i. VGA cable – is typically blue with a multi-pin connector and tension screws on either side of the connector
 - ii. BNC cable – is a black coaxial cable with a twist-lock connector

2. Where do I connect my cables?

- a. Connecting a BNC cable – First, remove the trap door on the back of the monitor. Then run the BNC cable from the VIDEO OUT port on the back of the DVR to the VIDEO IN port on the back of the monitor behind the trap door.
- b. Connecting a VGA cable – First, connect the cable to the VGA port on the DVR. Then connect the cable to the VGA port on the bottom panel of the monitor. Make sure to fasten the tension screws on either side of the pin connectors of the VGA cable.

3. I've connected my cables. Why can't I see any video?

- a. Powering your equipment – Be sure to that the power adapters are plugged in.
 - i. Powering the DVR – Connect the wall plug to the transformer, and plug the barrel connector into back of the DVR. The unit should now power up.
 - ii. Powering the monitor – Plug the power cable for the monitor into the wall and the monitor's power port. Press the POWER BUTTON on the right panel of the monitor. A green light indicates there is power to the unit.
- b. Selecting the SOURCE INPUT – Locate the buttons on the right panel of the monitor, specifically the SOURCE button, the UP AND DOWN ARROW buttons, and the MENU button.
 - i. Press the SOURCE button on the side of the monitor one time. A small sub-menu will appear in the upper left hand corner of the monitor. The submenu will list AV/BNC/SVIDEO/PC/HDMI. The option highlighted in orange is the current SOURCE INPUT.

11000 N. Mopac Expressway, Suite 300 • Austin, TX 78759

Toll Free: (800) 335-9777 • Fax: (866) 267-9777

www.supercircuits.com



- ii. VGA connection - Press the DOWN ARROW and highlight PC. Immediately press the MENU button to select PC as the source input.
 - iii. BNC connection – Press the DOWN ARROW and highlight BNC. Immediately press the MENU button to select BNC as the source input.
 - iv. Allow the submenu to disappear. Press the SOURCE button again to verify that you have the correct source input selected.
- c. If you still don't have a picture on screen, call **1-800-335-9777** for further support.

11000 N. Mopac Expressway, Suite 300 • Austin, TX 78759

Toll Free: (800) 335-9777 • Fax: (866) 267-9777

www.supercircuits.com